


# Changing the Remote Batteries

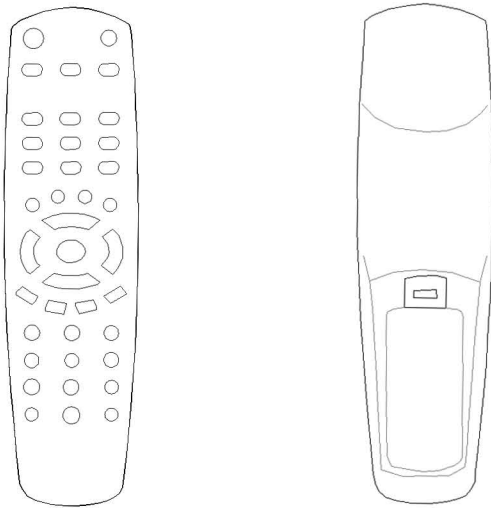

## Step 1

Flip the remote over so the back is facing up.

## Step 2

Remove battery cover by compressing battery cover tab with finger and lifting up. (Figure 2)

## Step 3

Remove batteries by pushing batteries into springs and then lifting out while spring is compressed. (Figure 3)

## Step 4

Insert new batteries by pressing the negative (-) end of the batteries into the springs. When the springs are compressed, lower the batteries into the compartment. (Figure 3)

## Step 5

Re-apply the battery cover by inserting the end of the cover into the hole at the bottom of the compartment. Then, with the tab compressed, lower the cover into position. (Figure 2)


 To avoid battery leakage, use the same brand and type of batteries. DO NOT mix new and used batteries



Figure 1



Figure 2



Figure 3